



# SINGLE ZONE VALVE CONTROLLER



## **THE CONTROLLER HAS UP TO FIVE OPERATION MODES:**

**P1** - Once daily at the same time (factory preset 15 minutes at 06:00 hours).

**P2** - Once daily at selected days.

**P3** - Up to three independent programs per day.

**Off** - Controller inactive.

**Manual** - Operation.

## Controller Keyboard

---

MODE - To select operating sequences and to enter programming.

SET - to set program values and advance to next step.

⊕ - Increase program values.

⊖ - Decrease program values.

## Controller Icons and Display

---

- Days - represented by the digits 1 - 7.
- Chosen day is framed.
- Current day is blinking.
- Hours represented in 24 hours format.
- P1, P2 or P3 - operating modes.
- Clock adjustment.




- Irrigation symbol



- Low battery 


- Manual Irrigation

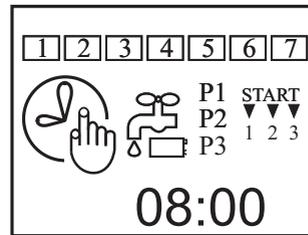

- Program starts numbers and active one. 

## Controller display in operating mode:

---

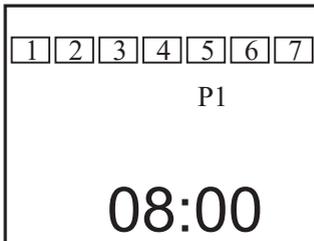

- Real time clock.
- Current day (blinking)
- Active mode (P1, P2, P3) or OFF when the controller is inactive.
- Press <MODE> briefly to switch modes.

### **Important !**


Set time and day accurately.

If no key is pressed for more than 30 seconds during programming, the controller resumes operating mode.

## Set Clock

---

1. Press <MODE> for 2 seconds.
2.  is displayed.
3. Use <⊖> or <⊕> keys to adjust (MINS)
4. Press <SET> to continue.
5. Use <⊖> or <⊕> keys to adjust (HRS).
6. Press <SET> to continue.
7. Use <⊖> or <⊕> keys to select day of the week.
8. Press <SET> to resume operating mode or press <MODE> to continue programming.

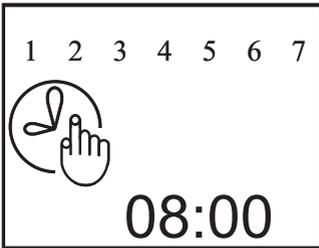

## Set P1


---

*From operation mode press <MODE> twice for a few seconds.*

9.  is displayed

### *Irrigation Duration*


10. Use <⊖> or <⊕> keys to adjust (MINS).
11. Press <SET> to continue.
12. Use <⊖> or <⊕> keys to adjust (HRS).
13. Press <SET> to continue.

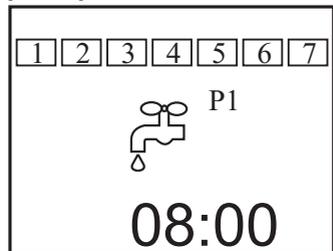

## Set the Irrigation Starting time

---

14. Below screen appears

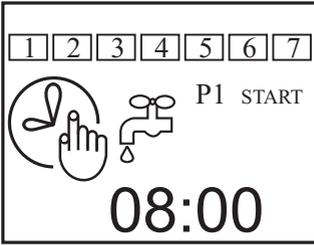

15. Use <⊕> or <⊖> to adjust (MINS)

16. Press <SET> to continue.

17. Use <⊕> or <⊖> to adjust (HRS)

18. Press <SET> to resume operating mode or press <MODE> to continue programming.


## Program P2 (Irrigation days)

---

From operation mode press <MODE> three times for a few seconds.

Note: Start time and irrigation duration as set in P1.

19. Below screen appears, Day 1 <sup>TM</sup>linksš.

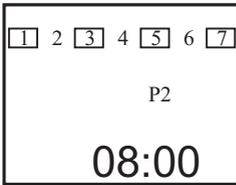

20. Use <⊕> to select a day.

21. Use <⊖> to deselect a day.

22. Press <SET> to continue and and program the rest of the days.


23. Press <SET> to resume operating mode or press <MODE> to continue programming.

## Program P3 (Irrigation days)

---

From operation mode press <MODE> four times for a few seconds.

24. Below screen appears, Day 1 <sup>TM</sup>linksš.

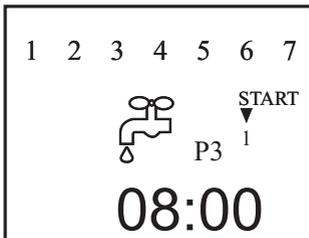

---

### ***Set the temporary irrigation time***

25. Set duration and start time  $\begin{matrix} \text{START} \\ \downarrow \downarrow \downarrow \\ 1 \end{matrix}$  (see programming of P1 in this manual).

26. Set in a similar way  $\begin{matrix} \text{START} \\ \downarrow \downarrow \downarrow \\ 2 \end{matrix}$  and  $\begin{matrix} \text{START} \\ \downarrow \downarrow \downarrow \\ 3 \end{matrix}$

### ***Set daily irrigation***

27. Select irrigation days (see programming of P2).

\* P3 programming completed.

---

## ***Manual Operation***

To start, press both <SET> & <⊕> keys.

To stop, press both <SET> & <⊖> keys.

Automatic stop: When the duration time at the active program (P) passes.

---

## ***Battery Replacement***

Replace battery as soon as low battery icon appears. 

*Note: Low battery icon will remain on display until the next operation (manual or automatic).*

Release the four screws of the battery compartment cover.

Gently remove the cover, seal and the screws.

Replace the battery with a new one. Use only high quality Alkaline battery.

Put the battery, seal and cover in place.

Re-tighten the four screws.

*Note: Backup batteries keep program safe.*

## P1 - Irrigation Schedule Design Demo

Start time		06:00				
Irrigation Duration		00:10				
Sun.	Mon.	Tues.	Wed.	Thu.	Fri.	Sat.
✓	✓	✓	✓	✓	✓	✓

## P1 - Irrigation Schedule Design Table

Start time						
Irrigation Duration						
Sun.	Mon.	Tues.	Wed.	Thu.	Fri.	Sat.
✓	✓	✓	✓	✓	✓	✓

---

## P2 - Irrigation Schedule Design Demo

Start time		As set				
Irrigation Duration		in P1				
Sun.	Mon.	Tues.	Wed.	Thu.	Fri.	Sat.
✓		✓		✓	✓	

## P2 - Irrigation Schedule Design Table

Start time		As set				
Irrigation Duration		in P1				
Sun.	Mon.	Tues.	Wed.	Thu.	Fri.	Sat.

---

## P3 - Irrigation Schedule Design Demo

		Start 1	Start 2	Start 3		
Start time		06:00	12:00	20:00		
Irrigation Duration		00:10	00:20	00:15		
Sun.	Mon.	Tues.	Wed.	Thu.	Fri.	Sat.
✓		✓		✓	✓	

## P3 - Irrigation Schedule Design Table

		Start 1	Start 2	Start 3		
Start time						
Irrigation Duration						
Sun.	Mon.	Tues.	Wed.	Thu.	Fri.	Sat.



5470 E. Home Ave. • Fresno, CA 93727  
(888) 638-2346 • Fax (800) 695-4753  
[www.netafimusa.com](http://www.netafimusa.com)

