

JANUARY 2017


## OCTAVE STRAIGHT PIPE REQUIREMENT UPDATE

In November 2016, we published a Netafim TechTALK that focused on some changes to the straight pipe requirements for the Octave Water Meter - specifically the installation of the Octave Water Meter downstream of the pump.

After additional evaluation of this straight pipe requirement, we are changing our recommendation back to the previously published requirements.

- Five (5) diameters of straight pipe downstream of a pump (before the meter) and Two (2) diameters of straight pipe downstream of the meter are required.

**NOTE:** When the meter is installed immediately downstream of the pump, Netafim recommends additional straight pipe to ensure accurate measurements.

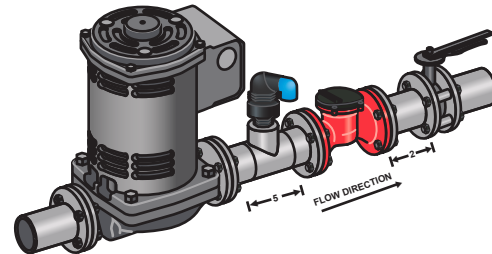

We apologize for any confusion this may have caused. For a complete guide to operation, installation and troubleshooting for the Octave Water Meters, refer to the Netafim Operations Installation and User Guide. Read all instructions and warnings prior to beginning installation.

For additional questions, contact your Netafim representative or visit our website at [www.netafimusa.com](http://www.netafimusa.com). Thank you.